



## Quick Install Guide - BT Home Monitor and Linksys IP Camera

This guide explains how to install and configure Linksys cameras and BT Home Monitor so that they can both be monitored by Intamac.

### OVERVIEW

Intamac have teamed up with Linksys to offer a unique service combining the best of alarm monitoring with Linksys' IP cameras. Now you can monitor your home when you are away and truly stay in touch. Monitoring an IP camera and alarm system together requires use of the Intamac Monitoring service. Our simple online registration process requires the creation of an Intamac account. Once your Intamac account has been created, you can subscribe to Intamac's monitoring services, and register your alarm and camera equipment.

### BILLING

When you register for an Intamac account you will need to create a BT Click and Buy account (if you don't already have one) which activates any free trial periods. You will only need to do this once, and you will be prompted at the appropriate time. This automated online payment mechanism allows you to pay for your Intamac services by direct debit, credit card or on your BT telephone bill. You can find out more about them at [www.btclickandbuy.com](http://www.btclickandbuy.com).

### SUPPORTING DOCUMENTS

1. **Intamac Quick Install Guide – BT Home Monitor**  
Available in the 'Install Guides' section at [www.intamac.com/support](http://www.intamac.com/support)
2. **Intamac Quick Install Guide – Linksys camera**  
Available in the 'Install Guides' section at [www.intamac.com/support](http://www.intamac.com/support)

### INSTALL PROCEDURE

1. **Register your first Linksys camera with Intamac**  
Install one of your Linksys cameras using the **Intamac Quick Install Guide – Linksys camera**.
2. **Add extra Linksys cameras**  
Add any extra Linksys cameras to your Intamac account now. To do this:
  - a. Install your new cameras using the Quick Install wizard supplied on the CD Rom.
  - b. Choose 'add camera to existing account' from the Intamac Monitoring tab on the camera's web interface.
3. **Install your BT Home Monitor**  
Now install your BT Home Monitor following the instructions in the **Intamac Quick Install Guide – BT Home Monitor**.
4. **Congratulations**  
Your home is now monitored by Intamac. Please refer to the Intamac User Guide supplied at [www.intamac.com/support](http://www.intamac.com/support).

### TROUBLESHOOTING

Refer to [www.intamac.com/support](http://www.intamac.com/support) and [www.intamac.com/linksys](http://www.intamac.com/linksys).